




P.O. BOX 837, 259 MURDOCK ROAD
 TROUTMAN, NC 28166
 (704) 528-9806

TRENCH FORMER®

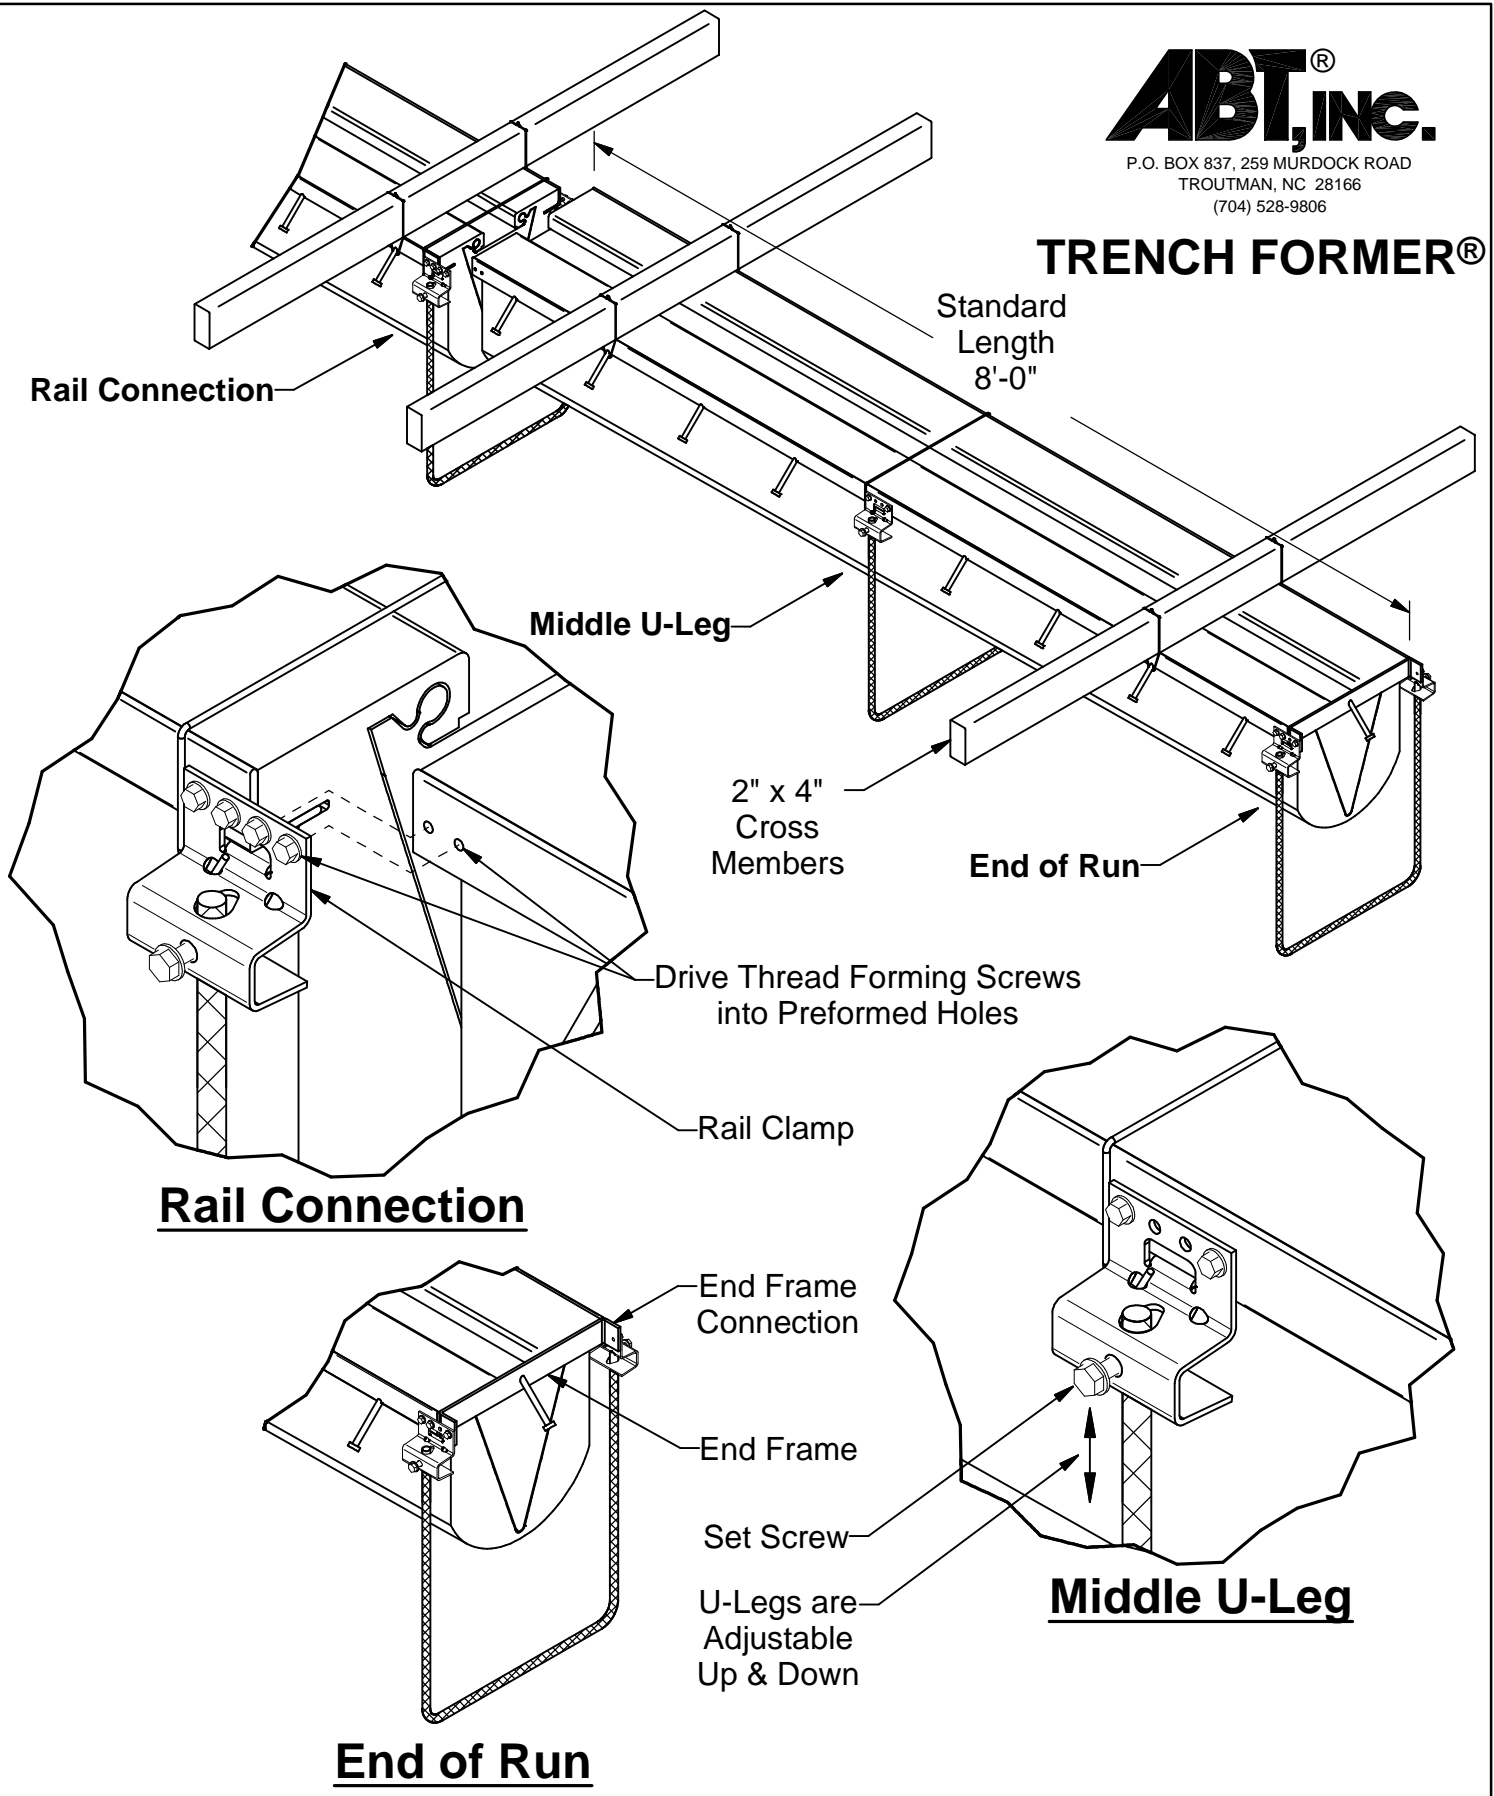

Rail Connection

Standard Length 8'-0"

Middle U-Leg

2" x 4" Cross Members

End of Run

Drive Thread Forming Screws into Preformed Holes

Rail Clamp

Rail Connection

End Frame Connection

End Frame

Set Screw

U-Legs are Adjustable Up & Down

Middle U-Leg

End of Run

© 2007 ABT, Inc.

Proprietary rights of ABT, Inc. are included in the information disclosed herein. The recipient, by accepting this document, agrees that neither this document nor the information disclosed herein nor any part thereof shall be copied, reproduced or transferred to others for manufacturing or for any other purpose except as specifically authorized in writing by ABT, Inc.

DISCLAIMER : The customer and the customer's architects, engineers, consultants and other professionals are completely responsible for the selection, installation, and maintenance of any product purchased from ABT, and EXCEPT AS EXPRESSLY PROVIDED IN ABT'S STANDARD WARRANTIES, ABT MAKES NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE SUITABILITY, DESIGN, MERCHANTABILITY, OR FITNESS OF THE PRODUCT FOR CUSTOMER'S APPLICATION. Copies of ABT's standard warranties are available upon request.

CROSS TIE INSTALLATION

(Middle U-Leg Connection)




P.O. BOX 837, 259 MURDOCK ROAD
TROUTMAN, NC 28166
(704) 528-9806

TRENCH FORMER®

Place Cross Tie across Rails
and behind Rail Clamp

Rail

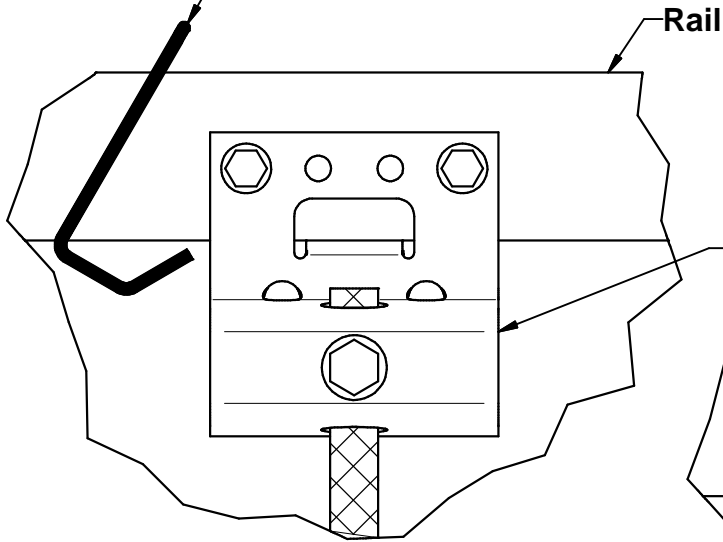


Rail Clamp

Hook End entering
Clamp opening

Step 1


Deflect Cross Tie legs inward behind
Rail Clamps. Push forward until
Hook Ends enter Clamp openings

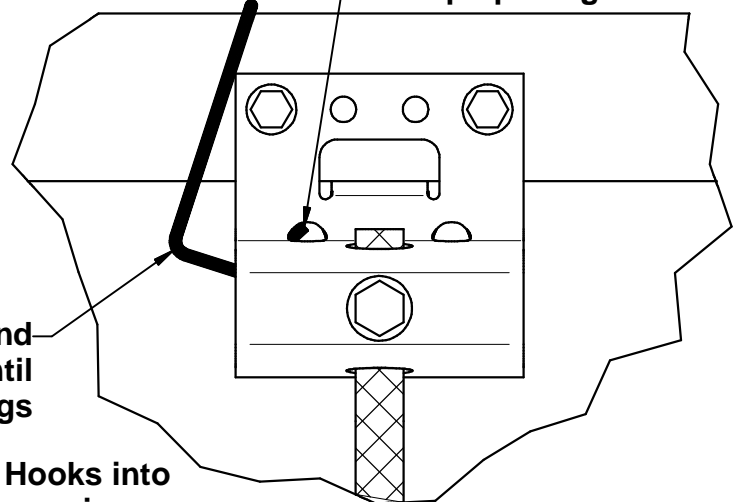

Step 2

Rotate Cross Tie forcing Hooks into
Clamp openings until they spring open
and lock into position

Hook End locked in position

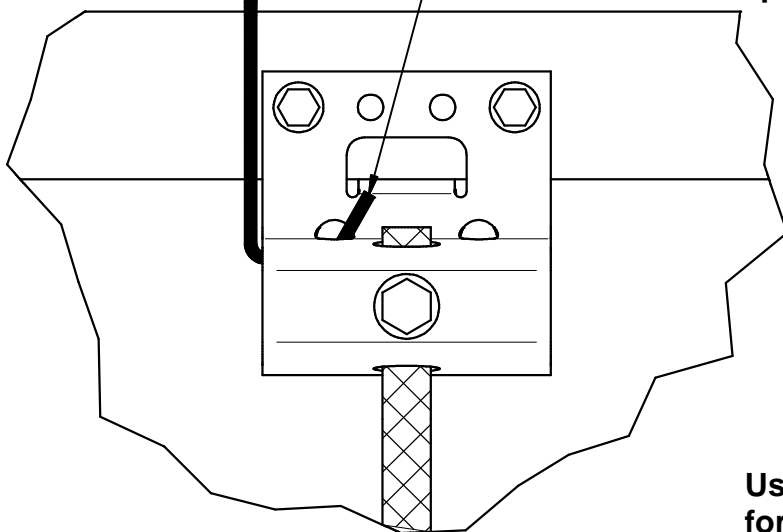

Step 3

Use two Cross Ties at each connection
for Form depths greater than 24 inches.

© 2007 ABT, Inc.

Proprietary rights of ABT, Inc. are included in the information disclosed herein. The recipient, by accepting this document, agrees that neither this document nor the information disclosed herein nor any part thereof shall be copied, reproduced or transferred to others for manufacturing or for any other purpose except as specifically authorized in writing by ABT, Inc.

DISCLAIMER : The customer and the customer's architects, engineers, consultants and other professionals are completely responsible for the selection, installation, and maintenance of any product purchased from ABT, and EXCEPT AS EXPRESSLY PROVIDED IN ABT'S STANDARD WARRANTIES, ABT MAKES NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE SUITABILITY, DESIGN, MERCHANTABILITY, OR FITNESS OF THE PRODUCT FOR CUSTOMER'S APPLICATION. Copies of ABT's standard warranties are available upon request.